
Product Instructions

Viega MegaPress® Pressure Independent Balancing and Control Valve (PIBCV)

This document is subject to updates. For the most current Viega technical literature please visit www.viega.us

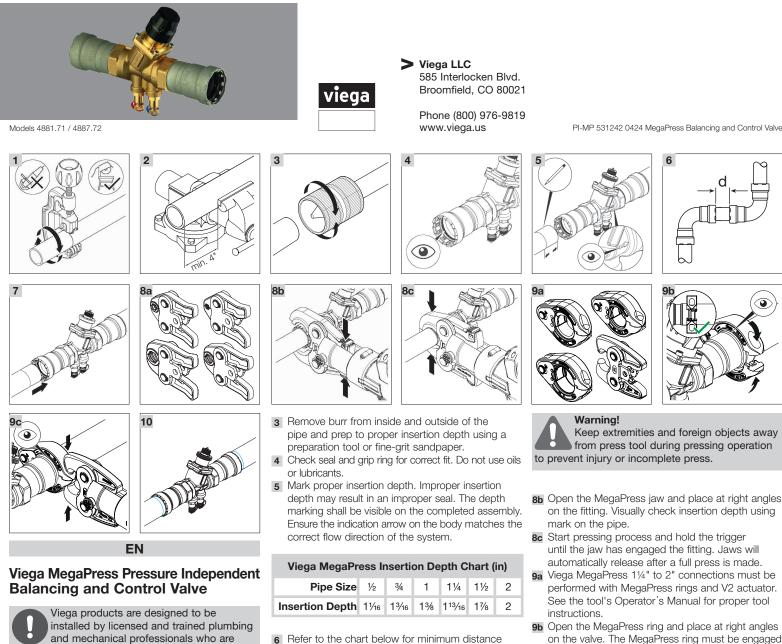

and mechanical professionals who are familiar with Viega products and their installation. Installation by non-professionals may void Viega LLC's warranty.





Only valves marked with NSF-61 and NSF-372 are allowed for use in potable water systems.

- 1 Cut pipe square using displacement-type cutter or fine-toothed saw.
- 2 Keep end of pipe a minimum of 4" away from the contact area of the vise to prevent possible damage to the pipe in the press area.

6 Refer to the chart below for minimum distance between fittings. To ensure a correct press, a minimum distance between press fittings must be maintained. Failure to provide this distance may result in an improper seal.

Pipe Diameter (in)	d (in)	d (mm)
1/2	1⁄4	6
3⁄4	1⁄4	6
1	1⁄4	6
1¼	1/2	13
1½	1/2	13
2	1/2	13

- 7 While turning slightly, slide valve onto the pipe to the marked depth. End of pipe must contact stop.
- 8a Viega MegaPress 1/2" to 1" fitting connections must be performed using MegaPress jaws. See the press tool's Operator's Manual for proper tool instructions.

PI-MP 531242 0424 MegaPress Balancing and Control Valve

on the fitting bead. Check insertion depth.

9c Place V2 actuator onto the MegaPress ring and

start the pressing process. Hold the trigger until

the actuator has engaged the MegaPress ring. 10 Remove MegaPress jaw from valve or release

V2 actuator from the MegaPress ring and then

remove the MegaPress ring from the valve on

end of the valve.

completion of press. Repeat steps for the other